

1. Remove iMEK from carton and plastic bag.

\*NOTE: Both cardboard and plastic are recyclable



2. Install lamps (54W T5HO).




3. Adjust reflector to desired light distribution (**Wide** through **Narrow**). This is accomplished via adjusting screws located at either end on back of fixture:

- i. Loosen wingnuts (two on each side)
- ii. Turn adjustment screws either counter-clockwise (narrow) or clockwise (wide)
- iii. Distribution increments located on sides reference spacing-to-mounting height. To set the reflector, divide fixture spacing by mounting height and adjust to this number (use increments found on side of fixture) \*NOTE: Fixture is preset to widest distribution; see chart for common choices
- iv. Hand tighten wingnuts




4. Remove quick plate. Install connector and wire/cable to quick plate. Connect wires (color coded for multi-level switching) from ballast. \*NOTE: Please use safety bushings or grommets when connecting wiring through fixture knockouts

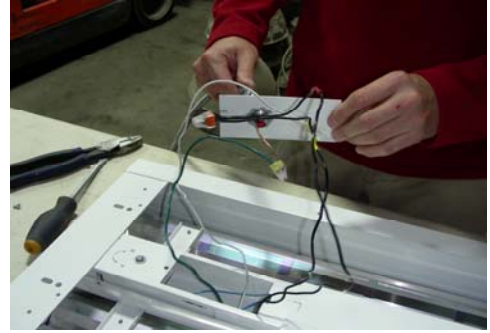

5. Reinstall quick plate.



6. Extend fixture hangers (included).

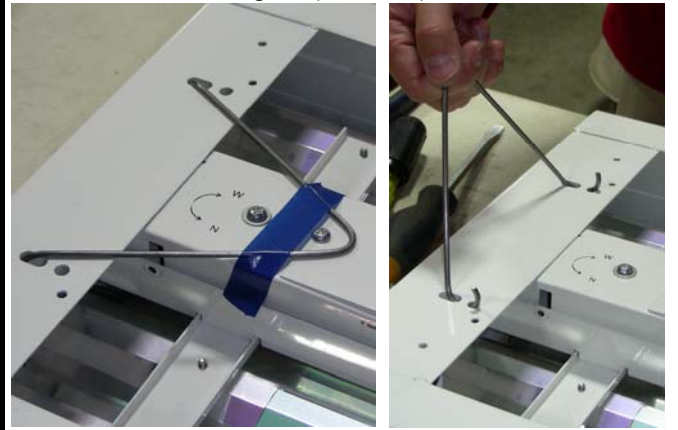

7. Safely install fixture as per local electrical and building codes.



\*Note: Pendant fixture to be mounted no less than 5" from the ceiling.